




# TH108 Smoked Oak

## Technical Data Sheet

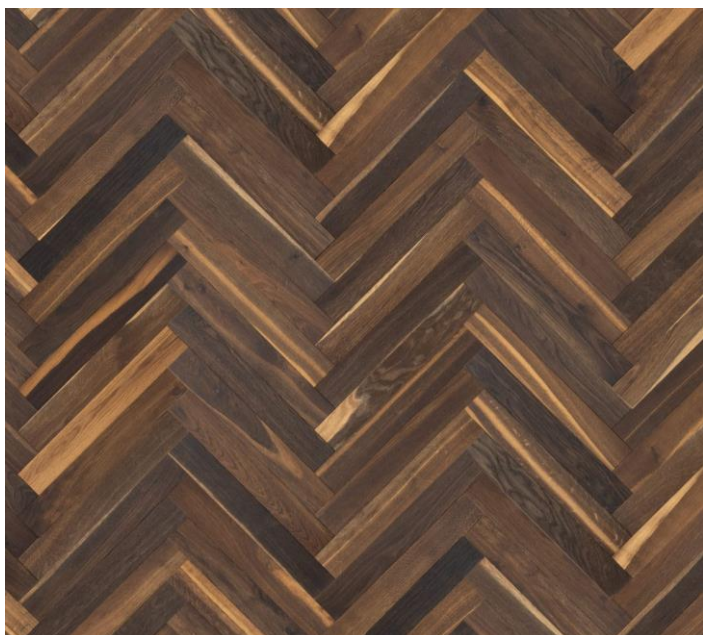

### Product Details:

Product Code	TH108
Collection	Tundra Herringbone
Construction	Engineered
Species	Oak
Product Type	Engineered Strip Herringbone
Surface	Brushed & Smoked
Finish	UV Cured Oil
Dimensions	70 x 11/4 x 490 mm
Top Layer	4 mm – Solid European Oak
Core Layer	7 mm – 2 Layer Soft Wood
Grade	CDE Rustic
Pack Size	2.06 m <sup>2</sup> (Right) + 2.06 m <sup>2</sup> (Left)
Pack Contents	Left or Right Faced Boards
Joint Type	Tongue & Grooved
Edge Profile	Bevel Edged on 4 sides

### Technical Information:

Origin	Europe
UKTR / UK Timber Regulation	Full documented evidence of legality of timber
FSC® Certification	FSC 100% Certified
PEFC® Certification	Not available with this product
Janka Hardness	Oak 1360 lbf (6000N)
Slip Resistance	EN 14231 (Test Result 58/42 PTV)
European Reaction to Fire Classification	EN 13501-1 (test result Dfl-s1)
Release of Formaldehyde	EN 717-1 (Test result E1)
Thermal Conductivity	EN 12524 (Test result: 0.16W/mK)
Tog Rating	1.13

### Installation Methods:

Fully Bonded	Yes*
Secret Nailed	No
Floated on Underlay	No
Over Underfloor Heating	Yes* (fully bonded installation recommended)
V4 Magnetic	Yes*

All V4 floors must be installed by an experienced and fully competent flooring installer who have the necessary skills to complete each installation in line with the BS8201:2011 standard. The responsibility of inspection of goods lies with the installer, and it is their duty to notify V4 of any potential concerns prior to installation. Installation of your V4 floor is considered acceptance of goods.  
\*Subject to correctly prepared and compatible subfloor and in conjunction with correct installation.

### Grading: Rustic

TH108 is a rustic grade floor, meaning it will contain varying amounts of live and dead filled knots. In addition, the floor will contain Heartwood and Sapwood, offering a wider range of colour variation, and Expert Checks can be expected (cracks along the growth ring). The colour of the filler used on this floor is intended to complement the natural structure of the wood, and such may contrast the surrounding timber, as can be seen in knots. This may vary from batch to batch.

### Maintenance: Oiled Floor Care



Sweep with a soft bristle brush, or the parquet attachment on your vacuum cleaner. Always ensure you are using PH Neutral cleaners and avoid soaking the floor with water. Avoid scratches by minimising grit and dust, install doorway entrance mats and felt pads to protect furniture. Periodic re-oiling may be required through the floor lifetime. Scan the QR code to visit our Oiled Floor Care page on our website, for more details.

### Further Information:



Scan this QR code to visit the TH108, Smoked Oak product page on our website, where you can find more information on the installation and maintenance, make an enquiry and order your free sample.

### Post-Installation:

**DO NOT COVER THIS PRODUCT WITH A NON-BREATHABLE COVERING FOR LONGER THAN 1 WEEK.** Prolonged covering may create a microclimate which can damage the protective top layer. Underfloor heating will greatly magnify the affect.



The mark of responsible forestry